


LightSync Power Supply Repeater 4

Wiring Details

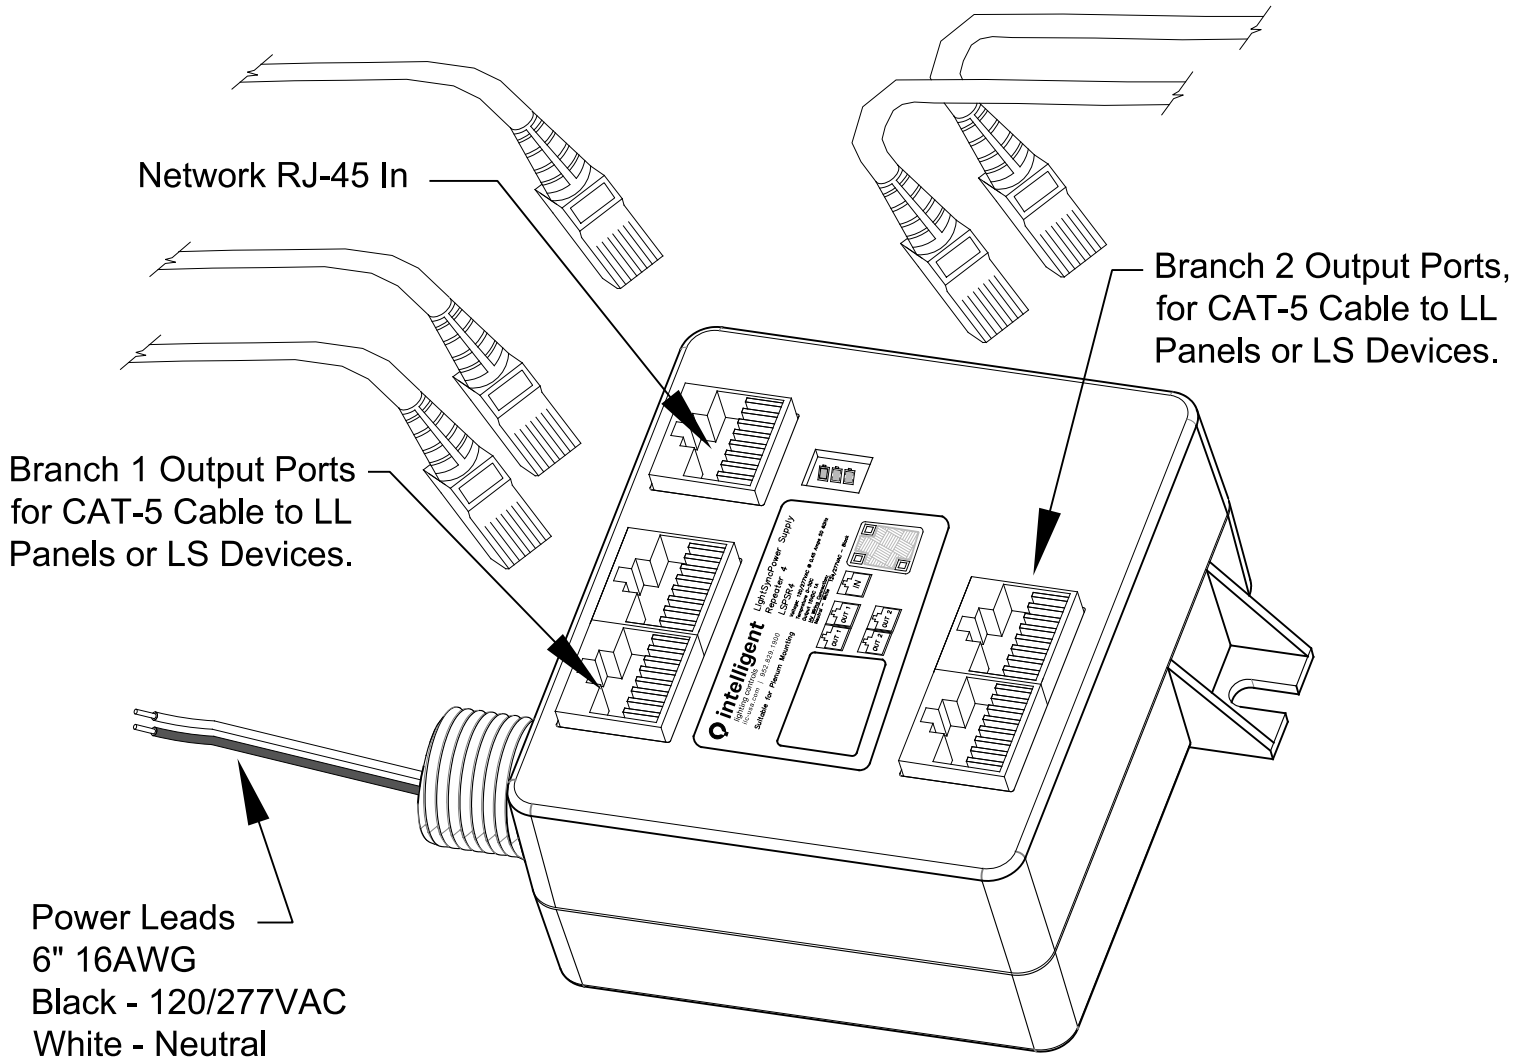

- Wire the LightSync Power Supply Repeater 4 to 120 or 277VAC power at a junction box or raceway.
- Use CAT-5 or better cable for all RJ-45 data ports.
- Connect CAT-5 data cable from the LL network or local LS output of a LLEVO panel to the Network RJ-45 Input port.
- Run CAT-5 cable out to LL panels or LS devices for up to 4 runs from the two repeaters branch 1 and 2.
- Refer to TB1408 for cumulative distance power calculations