


CONFERENCE ROOM

ASHRAE DESIGN GUIDE 90.1 - 2013

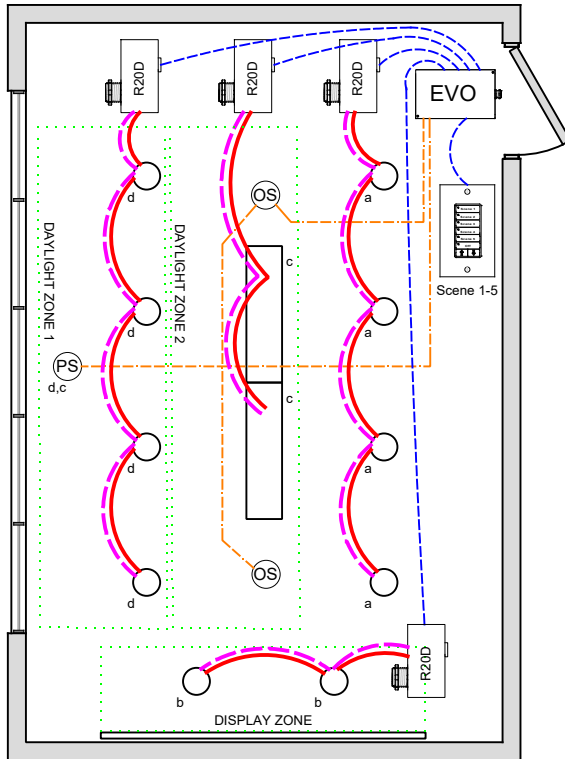

OVERVIEW:

Lighting zones are controlled together or individually with 0-10V dimming, programmable max/min levels, vacancy off, local digital control stations.

SEQUENCE OF OPERATION:

Lights turn on at digital switch station. Occupancy sensor input set for vacancy-off control, can be changed to on/off with adjustable dimm level per zone. Dimmer outputs provide smooth full range control, zones can be set for adjustable start level from occupancy or digital switch. Digital switch station provides Scene recall, capture and dimming. Photo Sensor monitors daylight and limits the maximum light level in the daylight zone, multiple zones can be controlled from one sensor with independent level settings for each.

ADDITIONAL OPTIONS:

Up to 4-zones with single LLEVO panel, additional LSEVO-4X, -8X expansion panels available for up to 20 zones. Additional LightSync switch stations as needed up to 32. Optional LightSync Touch Screen Station with Scene recall and capture with slide dimmer control. AV interfare for RS-232/485, Mobile LS Link APP interface. LLEVO control panel can connect to ILC network for building control. Emergency lighting control bypass relay for UL-924 can be added as needed.

WIRE LEGEND

—	Line voltage
---	0-10V Dimming
---	CAT-5e Data cable
---	3-Wire Occupancy Sensor or Photo Sensor

Bill Of Material:

Qt:	Product:	Description:
1	LLEVO	EVO Controller
4	R20D	Remote 20Amp Dimming relay
1	LSG3-WH-5-S	LightSync G3 5-Scene dimming digital switch station.
1	PS-IND	Photo Sensor - Indoor.
2	ILC-SWX-221-1	Occupancy sensor ceiling Dual Tech - 500sf

LLEVO Pre-Program: FC

CODE REQUIREMENTS SUPPORTED:

Auto-Off from Occupancy sensor
Multi-Level Dimming control
Multi-Level Daylight control
Local Switch control w/dimming